

ACCENTRONIX

IO Expansion Board

8 Inputs / 8 Outputs



General Features

Use in any application where you need more inputs and outputs.


- Add additional 8 relay outputs to your device.
- Add additional 8 inputs to your device.
- Easy connection to the Cellswitch Infinity with a ribbon cable.
- Manage all output and input messages from the online portal.
- Create a mimic panel to report to a control room status and alarms of multiple devices.

HOW TO ADD A I/O EXPANTION BOARD TO YOUR DEVICE

1. Install the your Cellswitch device and connect the I/O Expansion board (see connection diagram).
2. Register device online at www.cellswitchportal.co.za
3. On the online portal activate the I/O Expansion board Configuration > Advanced settings > Enable 8in/8out Expansion Board.
4. Change any reporting messages at Configuration > 8in/8out Expansion Board.
5. Save settings and update device.



Connecting a Cellswitch

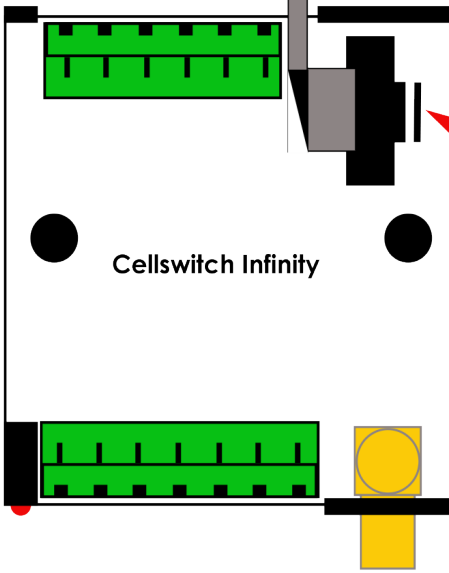

Align tab to marking on PCB

Get in Touch

Office and Technical: +27 87 550 3479

Technical support Whatsapp line: +27 63 631 0314

Support hours:

Weekdays: 8:30-17:00

Saturday: 9:30-13:00

Sunday and Public holiday: 9:30-11:00

sales@accentronix.co.za
support@accentronix.co.za

www.accentronix.co.za

